

Cheryl Ann, LLC
DESIGN WALL

ASSEMBLY INSTRUCTION SHEET




1. What's in the bag

A. 1-Carry Bag
 B. 8-8' Poles(folded)
 C. 1-Flannel Wall
 D. 4-Corner Clips
 E. 6-Brace Clips
 F. 2-Rubber End Caps
 G. 2-Stabilizer Bars




6. Assemble the brace clips

Place a brace clip(e) onto each end of 2 poles(b).

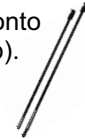



2. Unroll the flannel

Spread out design wall flannel front/label-side down

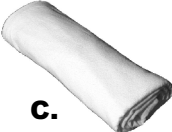

7. Install the back brace rods



Assemble the 2 back brace poles, forming a 90 degree cross as pictured. When fully assembled, they will pull the flannel wall tight. Note: It is normal for 1 brace to be bowed.

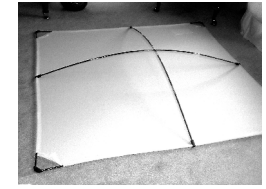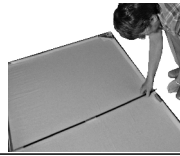

Note: DO NOT place clips over metal sleeves

3. Assemble the rods

Assemble the 8 rods, gently stretch and slide each section into the sleeve. Lay 4 aside for later

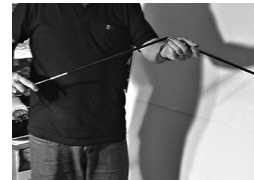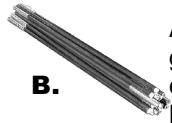


8. Assemble & Install support legs

Install a rubber end cap(f) and brace clip(e) onto each end of the 2 remaining poles(b). Attach leg clips 3"-6" from each corner on top frame rod



4. Insert the rods

Insert a rod(b) into each of the 4 corners of the wall, sliding the end to the opposite corner

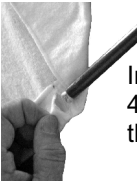

9. Install stabilizer bars & Stand wall

Clip one end of each stabilizer to the bottom rail of the flannel & the other end near the bottom of the legs.

Stand up the design wall, it's ready to use!
 You have successfully assembled your Design Wall



5. Install the corner clips


Install the corner clips(d) on each of the 2 poles at each corner, this will pull the wall taut



10. Helpful Hints

Before assembling the clips onto the support legs & stabilizers wrap a single layer of scotch tape around the pole. This will keep the clips from falling off

If you have occasion to wash your flannel, use COLD water only, then AIR DRY the flannel stretched on the frame to prevent shrinkage

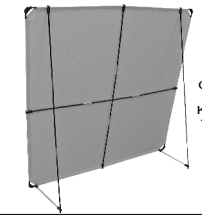

Cheryl Ann, LLC
 PO Box 36
 Keno, OR 97627
 1(877)234-0747